

ECO AIR-PROFI DC-1400W

ERGÄNZENDE INFORMATIONEN

Sehr geehrte Kunden,


zum Kauf unserer Heissluft-Multifritteuse **ECO AIR-PROFI DC-1400W** möchten wir Sie recht herzlich beglückwünschen. Wir wissen Ihr Vertrauen zu schätzen. **Funktions- und Betriebssicherheit stehen bei uns an erster Stelle.** Die Display-Funktion dieser Heissluftfritteuse wurde verbessert, um den **Standby-Verbrauch zu senken** und die Bedienung **noch sicherer und komfortabler** zu machen.

Bitte beachten Sie die folgenden Änderungen bei der Bedienung. Die stets aktuelle und vollständige Bedienungsanleitung finden Sie in unserem Online-Shop www.oeko-shopping.de im Download-Bereich https://www.oekoshopping.de/shop_content.php?colD=11.

BEDIENUNG

Einschalten

- Stecken Sie das Netzkabel in die Steckdose.
- Auf dem Display erscheint der erleuchtete POWER-Knopf .
- Diesen kurz antippen, damit das gesamte Display leuchtet.
- Nach dem Einschalten ertönt **kein** Geräusch, bis Sie ein Menü auswählen.
- Das Menü , Zeit  und Temperatur  mit kurzen Tastendruck auswählen.
- Starten Sie das Programm indem Sie mind. 3 sek. den POWER-Knopf gedrückt halten.
- Mit einem kurzen Druck auf den POWER-Knopf pausiert das Programm.
- Zum Ausschalten den POWER-Knopf wieder für mind. 3 sek. gedrückt halten.
- Beim ausgeschalteten Gerät leuchtet nur noch der POWER-Knopf und es sind keine Eingaben möglich.

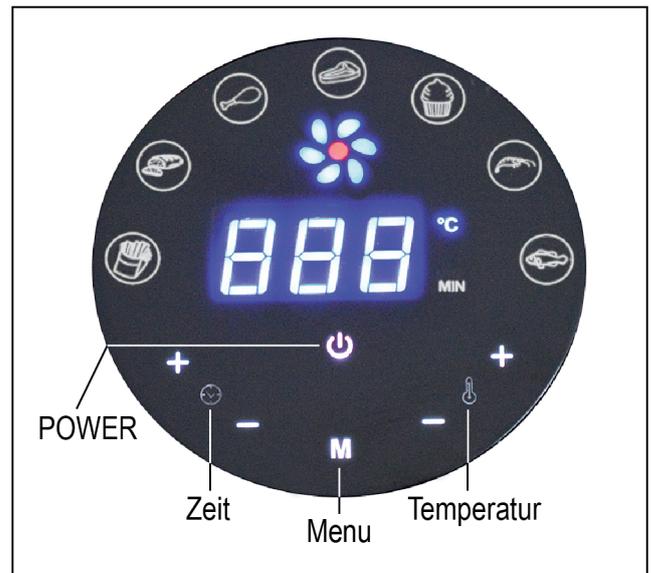

Temperatur-Anzeige

- Mit zweimaligem kurzen Drücken der Temperatur-Taste kann die Anzeige von **Fahrenheit** in **Celsius** umgestellt werden.

Bitte besuchen Sie unseren Online-Shop www.oeko-shopping.de und laden Sie sich unter dem Menüpunkt Downloads die neue und komplette Bedienungsanleitung herunter: https://www.oeko-shopping.de/shop_content.php?colD=11.

ECO AIR-PROFI DC-1400W

ADDITIONAL INFORMATIONS


Dear customers,

We would like to congratulate you on the purchase of our **ECO AIR-PROFI DC-1400W Hot Air Multi-Fryer**. We appreciate your trust. **Functional and operational safety** are our top priority. The display function of this hot air fryer has been changed to **reduce standby consumption** and make operation **even safer**. Please note the following changes in operation resulting from this **product improvement**. The current and complete operating instructions can be found in our online shop www.oeko-shopping.de in the download area https://www.oekoshopping.de/shop_content.php?colD=11.

OPERATION

Activation

- Plug the power cord into the wall outlet.
- At first, only the illuminated POWER button  appears on the display.
- Touch it briefly so that the entire display lights up.
- After switching on, there is **no** sound until you select a menu.
- Select the menu , time  and temperature  by briefly pressing a button.
- Start the program by pressing and holding the POWER button for at least 3 seconds.
- Pressing the POWER button briefly pauses the program.
- Press and hold the POWER button again for at least 3 seconds to switch off.
- When the device is switched off, the display lighting no longer lights up and no input is possible, only the POWER button is still lit.

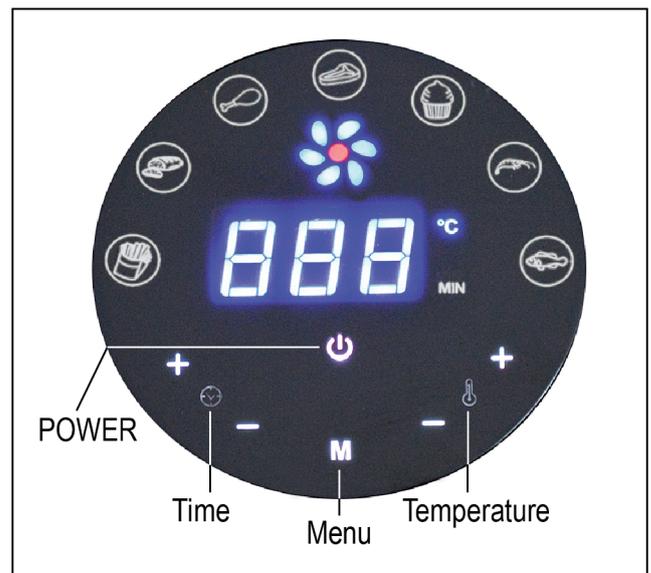

Temperature display

- Pressing the temperature button twice briefly switches the display from **Fahrenheit** to **Celsius**.

Please visit our online shop www.oeko-shopping.de and download the new and complete operating instructions under the menu item Downloads:
https://www.oeko-shopping.de/shop_content.php?colD=11.